



16" WALL FAN

Safety & Operating Instructions

Model: ORA-WF16



WARNING! TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY, READ ALL THE INSTRUCTIONS BEFORE USING THIS WALL FAN, AND FOLLOW THE INSTRUCTIONS!

BE SURE TO SAVE THIS MANUAL FOR FUTURE REFERENCE

Thank you for purchasing the 16" wall fan from ora. This fan has been manufactured to ensure safety, reliability and ease of use to help you create the optimum growing environment.

CAUTION: Keep this instruction manual safe for future reference.

IMPORTANT INSTRUCTIONS


When using the ora wall fan, basic electrical safety precautions should always be followed.

WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, FIRE OR INJURY TO PERSON, ALWAYS MAKE SURE THE PRODUCT IS UNPLUGGED FROM THE ELECTRICAL OUTLET BEFORE RELOCATING, SERVICING, OR CLEANING IT.

- Ensure all packaging is removed before use
- Check the power cord and plug for damage. If the power cord or plug is damaged **DO NOT** use. It must be replaced by manufacturer or a qualified person in order to avoid an electrical hazard
- **DO NOT** pull the control cords too hard as it could be damaged or fray. If it becomes damaged after a prolonged use it should be repaired by a qualified technician
- **DO NOT** operate without the guard being properly in place and secure
- Ensure the wall fan is securely attached to the wall with the enclosed wall bracket
- **DO NOT** touch the blades with your hands or any other objects whilst the unit is plugged into the mains electric supply
- Ensure that the voltage used corresponds to the voltage indicated on the rating plate
- **DO NOT** allow the power cord to touch hot surfaces and do not place near gas or electric burners

- This product is not a toy. To avoid risk of personal injury and electric shock the fan should not be played with or placed where small children can reach it
- For household use only
- This product is intended for indoor, non-commercial, non-industrial, household use only. **DO NOT** use outdoors. **DO NOT** use the product for any other purpose other than its intend use as it may cause fire, electric shock, or injury to persons
- **DO NOT** plug or unplug the product from the electrical outlet with a wet hand
- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury

PARTS DESCRIPTION

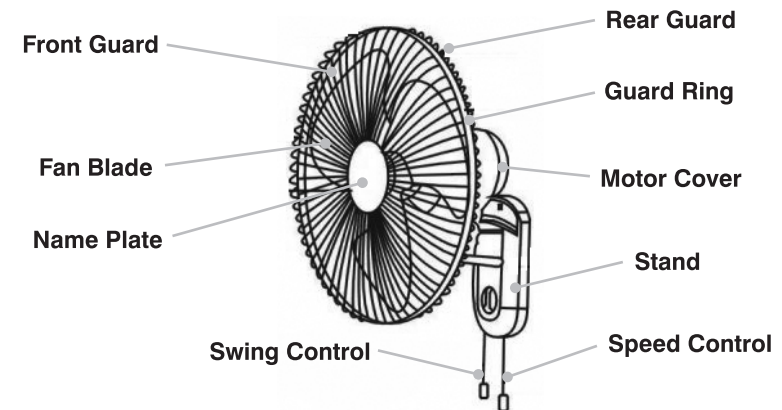

ASSEMBLY INSTRUCTIONS

This fan is packaged unassembled. You must assemble the fan correctly following the instruction before use.

WARNING: Never operate the fan without being fully assembled – the fan should only be operated in the upright position; any other position could create a hazardous situation.

Please assemble the fan in accordance with the following procedures.

DO NOT throw the carton away, please keep it for future use.

1. Adding the rear guard


- Fit the rear guard with the three pillars on the front motor cover and fix with the nuts

2. Adding the blade

- Face the warning sticker towards yourself and slip the blade into the motor shaft
- Install blade's cap onto the motor shaft by turning the blade's cap counter clockwise to secure the blade in place

3. Adding the front guard

- Unscrew the screw of the guard ring
- Fit the front guard with the rear guard
- Fasten the screw

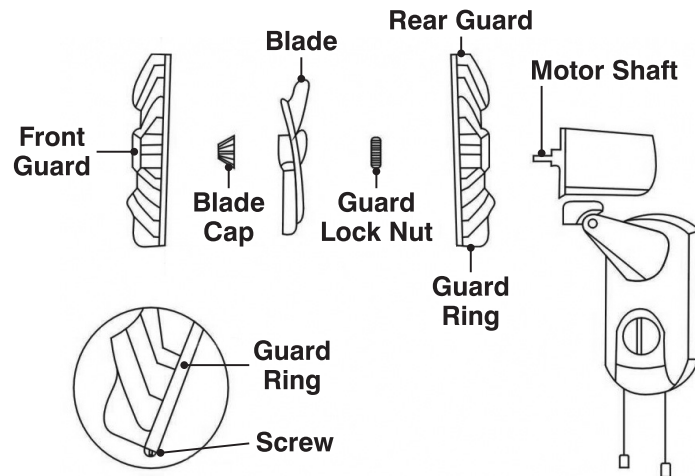

INSTALLATION

WARNING: ENSURE THERE ARE NO HIDDEN WIRES WHERE YOU INTEND TO DRILL.


- Using a spirit level and ruler mark the wall where you want the fan to be installed
- Attach the plate to a wall – ensure it is secure and level
- Hook the fan onto the plate

OPERATING INSTRUCTIONS


1. Never insert fingers, or other objects through the grille at any time.
2. Disconnect the fan when moving.
3. Disconnect the fan from the mains when removing grilles for cleaning.
4. Ensure the fan is connected to the wall securely, following the instructions before operating.




This fan has 3 speeds.

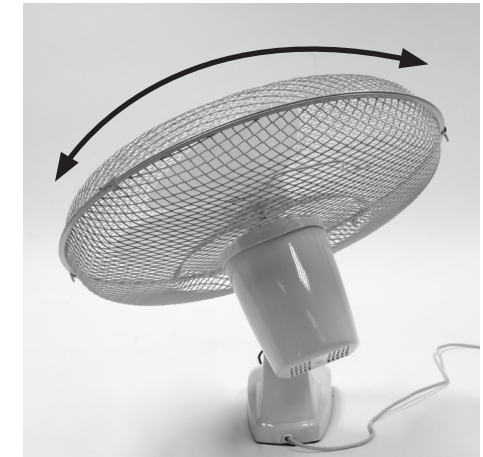

Fan oscillates.

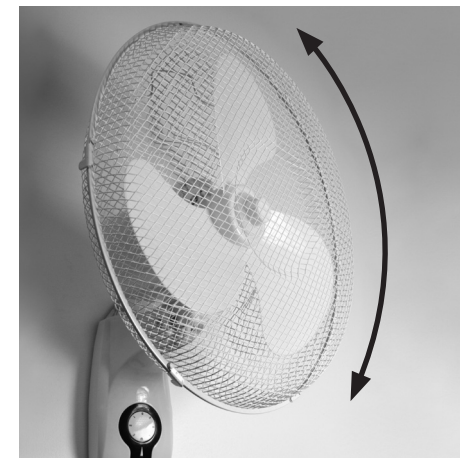

The fan can be angled up or down incrementally.

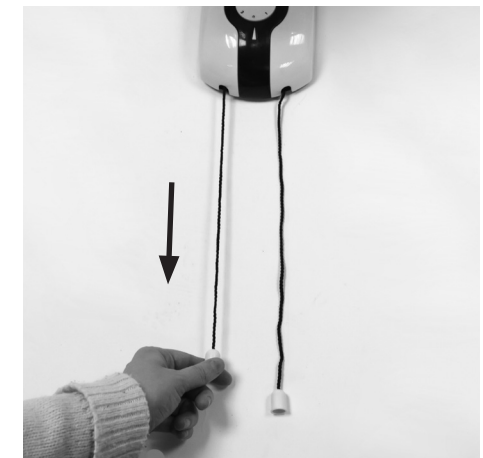

Pull left cord once for oscillation. Pull cord again to stop oscillation.


Pull right cord to change speeds and turn off.

MAINTENANCE

- Ensure the fan is switched off and unplugged from the mains electric supply before cleaning the unit
- Disconnect the power cord from the wall socket. Remove the guard and bladed carefully. Do not drop the blades. Following the disassembling instructions
- Use a soft damp cloth with a little mild soap to wipe parts. **NEVER** use polish or any corrosive liquid that will damage the paint, metal or plastic
- Thoroughly remove all soap and dry
- **DO NOT** allow water to drip on or into the fan motor housing
- Reassemble the ora wall fan after the parts have dried completely, follow the assembly instructions carefully
- **DO NOT IMMERSE THE UNIT IN WATER**

DISASSEMBLING THE FAN

1. Unscrew the screw of the guard ring.
2. Hold the guard ring and pull the front guard slightly outward to remove the front guard from the rear guard.
3. Turn the blade's cap clockwise to remove the cap from the motor shaft.
4. Remove fan blade from the motor shaft.

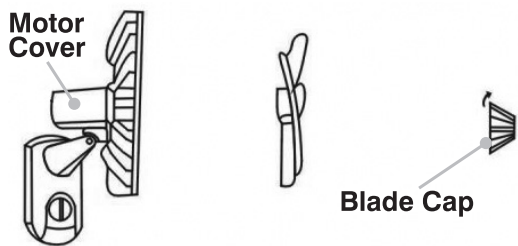

TECHNICAL SPECIFICATIONS		
Model No.	Rated Voltage & Frequency	Wattage
ORA-WF16	230V ±10% 50Hz	45W

STORAGE

When not in use, store fan in a cool dry location.

PROBLEM SOLVING

PROBLEM: Fan blades do not rotate after fan has been started.

ANSWER: Check to see if the plug is inserted into the wall socket correctly. Ensure the fan blades are not obstructed and are not touching the fan grille.

PROBLEM: There is an abnormal sound when the fan starts.

ANSWER: Ensure the fan blades are inserted on the motor shaft properly and it is seated on the rotor pin. Ensure the fan blades are not hitting the fan grille. Check there are not burrs on the fan blade.

ENVIRONMENTAL PROTECTION



Disposal
For electrical products sold within the UK and the European Community. This symbol means that this product must not be placed into general waste at the end of the electrical product's useful life. It should be sent to a separate recycling facility. Check with your Local Authority for recycling advice in your country.

By recycling responsibly, it will help protect the environment and human health.

Warranty

This product is guaranteed under warranty and covers defects in material or workmanship from 1 year of date of purchase. The original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of: Misuse: by non-compliance of the instructions, normal wear and tear, incorrect use, e.g. overloading, non-approved accessories, force or damaged caused by external forces, if the plug has been tampered with or removed, partially or completely dismantled product, or interference by non-qualified persons.



Global Air Supplies
Unit 36, Meadows Road,
Rotherham, S63 5DJ
www.globalairsupplies.co.uk

Made in PRC

